



Windows® 7 Compatibility List

| Inkjet All-in-One Printer | Windows 7 OS | Windows Updates | Canon Download Library | |
|-----------------------------------------------------------------------------------------|--------------|-----------------|------------------------|--------|
| | | | MP Driver | Add-On |
| Add-on module provides additional color management features when printing photos | | | | |
| PIXMA MP130 | | | ✓ | |
| PIXMA MP140 | | | ✓ | |
| PIXMA MP150 | | | ✓ | |
| PIXMA MP160 | | | ✓ | |
| PIXMA MP170 | | | ✓ | |
| PIXMA MP180 | | | ✓ | |
| PIXMA MP190 | | | ✓ | |
| PIXMA MP210 | | | ✓ | |
| PIXMA MP240 | | | ✓ | |
| PIXMA MP250 | | | ✓ | |
| PIXMA MP360* | | | ✓ | ✓ |
| PIXMA MP370* | | | ✓ | ✓ |
| PIXMA MP390* | | | ✓ | ✓ |
| PIXMA MP450 | | | ✓ | |
| PIXMA MP460 | | | ✓ | |
| PIXMA MP470 | | | ✓ | |
| PIXMA MP480 | | | ✓ | |
| PIXMA MP490 | | | ✓ | |
| PIXMA MP500 | | | ✓ | |
| PIXMA MP510 | | | ✓ | |
| PIXMA MP520 | | | ✓ | |
| PIXMA MP530 | | | ✓ | |
| PIXMA MP560 | | | ✓ | |
| PIXMA MP600 | | | ✓ | |
| PIXMA MP610 | | | ✓ | |
| PIXMA MP620 | | | ✓ | |
| PIXMA MP620B | | | ✓ | |
| PIXMA MP640 | | | ✓ | |
| PIXMA MP700* | | | ✓ | ✓ |
| PIXMA MP730* | | | ✓ | ✓ |
| PIXMA MP750 | | | ✓ | |
| PIXMA MP760 | | | ✓ | |
| * Add-on module available for Windows 7 (x64) | | | | |
| ^ XPS driver is available for download from Canon Download Library. | | | | |



Windows® 7 Compatibility List

| Inkjet All-in-One Printer | Windows 7 OS | Windows Updates | Canon Download Library | |
|-----------------------------------------------------------------------------------------|--------------|-----------------|------------------------|--------|
| | | | MP Driver | Add-On |
| Add-on module provides additional color management features when printing photos | | | | |
| PIXMA MP780 | | | ✓ | |
| PIXMA MP800 | | | ✓ | |
| PIXMA MP800R | | | ✓ | |
| PIXMA MP810 | | | ✓ | |
| PIXMA MP830 | | | ✓ | |
| PIXMA MP950 | | | ✓ | |
| PIXMA MP960 | | | ✓ | |
| PIXMA MP970 | | | ✓ | |
| PIXMA MP980^ | | | ✓ | |
| PIXMA MP990^ | | | ✓ | |
| PIXMA MX300 | | | ✓ | |
| PIXMA MX310 | | | ✓ | |
| PIXMA MX320 | | | ✓ | |
| PIXMA MX330 | | | ✓ | |
| PIXMA MX700 | | | ✓ | |
| PIXMA MX7600 | | | ✓ | |
| PIXMA MX850 | | | ✓ | |
| PIXMA MX860 | | | ✓ | |
| * Add-on module available for Windows 7 (x64) | | | | |
| ^ XPS driver is available for download from Canon Download Library. | | | | |



Windows 7 Model Compatibility List

| Inkjet Printer and Inkjet Fax | Windows 7 OS | Windows Updates | Canon Download Library | |
|---------------------------------------------------------------------------------------------------|--------------|-----------------|------------------------|--------|
| | | | Driver | Add-On |
| Add-on module provides additional color management features when printing photos | | | | |
| FAX-JX210P | | | ✓ | |
| i250 * | | ✓ | | ✓ |
| i320* | | ✓ | | ✓ |
| i350* | | ✓ | | ✓ |
| i450* | | ✓ | | ✓ |
| i455* | | ✓ | | ✓ |
| i470D* | | ✓ | | ✓ |
| i475D* | | ✓ | | ✓ |
| i550* | | ✓ | | ✓ |
| i560* | | ✓ | | ✓ |
| i70* | | ✓ | | ✓ |
| i80* | | ✓ | | ✓ |
| i850 Series* | | ✓ | | ✓ |
| i860* | | ✓ | | ✓ |
| i900D* | | ✓ | | ✓ |
| i9100* | | ✓ | | ✓ |
| i950* | | ✓ | | ✓ |
| i960* | | ✓ | | ✓ |
| i9900* | | ✓ | | ✓ |
| PIXMA iP100 | ✓ | | | ✓ |
| PIXMA iP1500* | | ✓ | | ✓ |
| PIXMA iP1600* | | ✓ | | ✓ |
| PIXMA iP1700 | ✓ | | | ✓ |
| PIXMA iP1800 | ✓ | | | ✓ |
| PIXMA iP2000* | | ✓ | | ✓ |
| PIXMA iP2600 | ✓ | | | ✓ |
| PIXMA iP3000* | | ✓ | | ✓ |
| PIXMA iP3300 | ✓ | | | ✓ |
| PIXMA iP3500 | ✓ | | | ✓ |
| PIXMA iP3600 | ✓ | | | ✓ |
| PIXMA iP4000* | | ✓ | | ✓ |
| * Internet connection is needed for your PC | | | | |
| ^ XPS driver is available for download from our support site | | | | |
| Drivers that are provided by either Windows 7 OS or Windows Updates are missing an Add-on module. | | | | |



Windows 7 Model Compatibility List

| Inkjet Printer and Inkjet Fax | Windows 7 OS | Windows Updates | Canon Download Library | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|-----------------|------------------------|--------|
| | | | Driver | Add-On |
| Add-on module provides additional color management features when printing photos | | | | |
| PIXMA iP4000R* | | ✓ | | ✓ |
| PIXMA iP4200* | | ✓ | | ✓ |
| PIXMA iP4300 | ✓ | | | ✓ |
| PIXMA iP4500 | ✓ | | | ✓ |
| PIXMA iP4600 | ✓ | | | ✓ |
| PIXMA iP4700 | | | | ✓ |
| PIXMA iP5000* | | ✓ | | ✓ |
| PIXMA iP5200* | | ✓ | | ✓ |
| PIXMA iP5200R* | | ✓ | | ✓ |
| PIXMA iP6000D* | | ✓ | | ✓ |
| PIXMA iP6210D | | | ✓ | |
| PIXMA iP6220D | | | ✓ | |
| PIXMA iP6310D | ✓ | | | ✓ |
| PIXMA iP6600D* | | ✓ | | ✓ |
| PIXMA iP6700D | ✓ | | | ✓ |
| PIXMA iP8500* | | ✓ | | ✓ |
| PIXMA iP90* | | ✓ | | ✓ |
| PIXMA iP90v* | | ✓ | | ✓ |
| PIXMA iX7000 | | | | ✓ |
| PIXMA mini260 | ✓ | | | ✓ |
| PIXMA mini320 | ✓ | | | ✓ |
| PIXMA Pro9000^ | ✓ | | ✓ | ✓ |
| PIXMA Pro9000 Mark II^ | | | ✓ | ✓ |
| PIXMA Pro9500^ | ✓ | | ✓ | ✓ |
| PIXMA Pro9500 MarkII^ | | | ✓ | ✓ |
| S200* | | ✓ | | ✓ |
| S330* | | ✓ | | ✓ |
| S520* | | ✓ | | ✓ |
| S530D* | | ✓ | | ✓ |
| S750* | | ✓ | | ✓ |
| S820 Series* | | ✓ | | ✓ |
| <p>* Internet connection is needed for your PC</p> <p>^ XPS driver is available for download from our support site</p> <p>Drivers that are provided by either Windows 7 OS or Windows Updates are missing an Add-on module.</p> | | | | |



Windows 7 Model Compatibility List

| Inkjet Printer and Inkjet Fax | Windows 7 OS | Windows Updates | Canon Download Library | |
|---------------------------------------------------------------------------------------------------|--------------|-----------------|------------------------|--------|
| | | | Driver | Add-On |
| Add-on module provides additional color management features when printing photos | | | | |
| S820D* | | ✓ | | ✓ |
| S830D* | | ✓ | | ✓ |
| S900* | | ✓ | | ✓ |
| S9000* | | ✓ | | ✓ |
| SELPHY DS700* | | ✓ | | ✓ |
| SELPHY DS810* | | ✓ | | ✓ |
| * Internet connection is needed for your PC | | | | |
| ^ XPS driver is available for download from our support site | | | | |
| Drivers that are provided by either Windows 7 OS or Windows Updates are missing an Add-on module. | | | | |



Windows® 7 Compatibility List

| Selphy Compact Photo Printer | Windows 7 OS | Windows Updates | Canon Download Library |
|------------------------------|--------------|-----------------|------------------------|
| SELPHY CP510 | | | ✓ |
| SELPHY CP710 | | | ✓ |
| SELPHY CP720 | | | ✓ |
| SELPHY CP730 | | | ✓ |
| SELPHY CP740 | | | ✓ |
| SELPHY CP760 | | | ✓ |
| SELPHY CP770 | | | ✓ |
| SELPHY CP780 | | | ✓ |
| SELPHY CP790 | | | ✓ |
| SELPHY DS700 | | | ✓ |
| SELPHY DS810 | | | ✓ |
| SELPHY ES1 | | | ✓ |
| SELPHY ES2 | | | ✓ |
| SELPHY ES3 | | | ✓ |
| SELPHY ES30 | | | ✓ |
| SELPHY ES40 | | | ✓ |

Easy-PhotoPrint EX and SELPHY Photo Print will need to be updated for certain models.



Windows® 7 Compatibility List

| CanoScan Scanner | Windows 7 OS | Windows Updates | Canon Download Library |
|--------------------------------|--------------|-----------------|------------------------|
| CanoScan 3000ex * | | | ✓ |
| CanoScan 3200F * | | | ✓ |
| CanoScan 4200F | | | ✓ |
| CanoScan 4400F | | | ✓ |
| CanoScan 5600F | | | ✓ |
| CanoScan 8000F * | | | ✓ |
| CanoScan 8400F * | | | ✓ |
| CanoScan 8600F | | | ✓ |
| CanoScan 8800F | | | ✓ |
| CanoScan 9950F | | | ✓ |
| CanoScan LiDE 20 * | | | ✓ |
| CanoScan LiDE 25 | | | ✓ |
| CanoScan LiDE 35 * | | | ✓ |
| CanoScan LiDE 500F | | | ✓ |
| CanoScan LiDE 60 | | | ✓ |
| CanoScan LiDE 600F | | | ✓ |
| CanoScan LiDE 70 | | | ✓ |
| CanoScan LiDE 80 * | | | ✓ |
| CanoScan LiDE 90 | | | ✓ |
| CanoScan LiDE100 | | | ✓ |
| CanoScan LiDE200 | | | ✓ |
| CanoScan LiDE700F | | | ✓ |
| * Only 32-bit driver available | | | |



Windows® 7 Compatibility List

| imageCLASS Printer | Windows 7 OS | Windows Updates | Canon Download Library |
|----------------------------|--------------|-----------------|------------------------|
| Color imageCLASS MF8050Cn | | | ✓ |
| Color imageCLASS MF8350Cdn | | | ✓ |



Windows® 7 Compatibility List

| Digital Camcorder | Windows 7 OS | Windows Updates | Canon Download Library |
|---------------------------------------------------------------------|--------------|-----------------|------------------------|
| DC410 | ✓ | | |
| DC420 | ✓ | | |
| FS20* ^ | ✓ | | |
| FS200* ^ | ✓ | | |
| FS21* ^ | ✓ | | |
| FS22* ^ | ✓ | | |
| VIXIA HF S10* ^ | ✓ | | |
| VIXIA HF S100* ^ | ✓ | | |
| VIXIA HF S11* ^ | ✓ | | |
| VIXIA HF20* ^ | ✓ | | |
| VIXIA HF200* ^ | ✓ | | |
| VIXIA HF21* ^ | ✓ | | |
| VIXIA HG20* ^ | ✓ | | |
| VIXIA HG21* ^ | ✓ | | |
| VIXIA HV40* | ✓ | | |
| ZR960 | ✓ | | |
| * CameraWindow does not start (still images only). | | | |
| ^ PIXELA ImageMixer 3SE is not supported by Windows 7 at this time. | | | |



Windows® 7 Compatibility List

| EOS (DIGITAL SLR) Camera | Windows 7 OS | Windows Updates | Canon Download Library |
|--------------------------|--------------|-----------------|------------------------|
| EOS-1D** | ✓ | | |
| EOS 10D** | ✓ | | |
| EOS 1D Mark III | ✓ | | |
| EOS 1Ds Mark III | ✓ | | |
| EOS 20D* | ✓ | | |
| EOS 20Da* | ✓ | | |
| EOS 30D | ✓ | | |
| EOS 40D | ✓ | | |
| EOS 50D | ✓ | | |
| EOS 5D Mark II | ✓ | | |
| EOS 5D* | ✓ | | |
| EOS 7D | ✓ | | |
| EOS D30** | ✓ | | |
| EOS D60** | ✓ | | |
| EOS-1D Mark II N* | ✓ | | |
| EOS-1D Mark II* | ✓ | | |
| EOS-1Ds Mark II* | ✓ | | |
| EOS-1Ds** | ✓ | | |
| EOS Digital Rebel** | ✓ | | |
| EOS Digital Rebel XT*** | ✓ | | |
| EOS Digital Rebel XTi | ✓ | | |
| EOS Rebel XS | ✓ | | |
| EOS Rebel XSi | ✓ | | |
| EOS Rebel T1i | ✓ | | |

* Windows 7 32-bit only with EOS utility; Not recognized when using standard function of OS

** Images can be viewed using memory card only; does not support EOS Utility.

*** Windows 7 32-bit only

Models with no asterisk are supported for direct downloading via USB interface with Windows 7 32-bit and 64-bit systems.



Windows® 7 Compatibility List

| PowerShot Digital Camera | Windows 7 OS | Windows Updates | Canon Download Library |
|--------------------------|--------------|-----------------|------------------------|
| PowerShot A10** | ✓ | | |
| PowerShot A20** | ✓ | | |
| PowerShot A30** | ✓ | | |
| PowerShot A40** | ✓ | | |
| PowerShot A60* | ✓ | | |
| PowerShot A70* | ✓ | | |
| PowerShot A75* | ✓ | | |
| PowerShot A80* | ✓ | | |
| PowerShot A85* | ✓ | | |
| PowerShot A95* | ✓ | | |
| PowerShot A100** | ✓ | | |
| PowerShot A200** | ✓ | | |
| PowerShot A300* | ✓ | | |
| PowerShot A310* | ✓ | | |
| PowerShot A400* | ✓ | | |
| PowerShot A410* | ✓ | | |
| PowerShot A420* | ✓ | | |
| PowerShot A430* | ✓ | | |
| PowerShot A450* | ✓ | | |
| PowerShot A460* | ✓ | | |
| PowerShot A470 | ✓ | | |
| PowerShot A480 | ✓ | | |
| PowerShot A510* | ✓ | | |
| PowerShot A520* | ✓ | | |
| PowerShot A530* | ✓ | | |
| PowerShot A540* | ✓ | | |
| PowerShot A550* | ✓ | | |
| PowerShot A560* | ✓ | | |
| PowerShot A570 IS* | ✓ | | |
| PowerShot A580 | ✓ | | |
| PowerShot A590 IS | ✓ | | |

* CameraWindow does not start.

** Images can be viewed using memory card only.

^ Wireless connection not supported.

Models with no asterisks launch CameraWindow automatically.

Does not include PowerShot models released before 2001.



Windows® 7 Compatibility List

| PowerShot Digital Camera | Windows 7 OS | Windows Updates | Canon Download Library |
|--------------------------|--------------|-----------------|------------------------|
| PowerShot A610* | ✓ | | |
| PowerShot A620* | ✓ | | |
| PowerShot A630* | ✓ | | |
| PowerShot A640* | ✓ | | |
| PowerShot A650 IS | ✓ | | |
| PowerShot A700* | ✓ | | |
| PowerShot A710 IS* | ✓ | | |
| PowerShot A720 IS | ✓ | | |
| PowerShot A1000 IS | ✓ | | |
| PowerShot A1100 IS | ✓ | | |
| PowerShot A2000 IS | ✓ | | |
| PowerShot A2100 IS | ✓ | | |
| PowerShot D10 | ✓ | | |
| PowerShot E1 | ✓ | | |
| PowerShot G1** | ✓ | | |
| PowerShot G2** | ✓ | | |
| PowerShot G3** | ✓ | | |
| PowerShot G5* | ✓ | | |
| PowerShot G6* | ✓ | | |
| PowerShot G7* | ✓ | | |
| PowerShot G9 | ✓ | | |
| PowerShot G10 | ✓ | | |
| PowerShot G11 | ✓ | | |
| PowerShot Pro1* | ✓ | | |
| PowerShot Pro90 IS** | ✓ | | |
| PowerShot S1 IS* | ✓ | | |
| PowerShot S2 IS* | ✓ | | |
| PowerShot S3 IS* | ✓ | | |
| PowerShot S5 IS* | ✓ | | |
| PowerShot S10** | ✓ | | |
| PowerShot S20** | ✓ | | |

* CameraWindow does not start.

** Images can be viewed using memory card only.

^ Wireless connection not supported.

Models with no asterisks launch CameraWindow automatically.

Does not include PowerShot models released before 2001.



Windows® 7 Compatibility List

| PowerShot Digital Camera | Windows 7 OS | Windows Updates | Canon Download Library |
|-----------------------------------------|--------------|-----------------|------------------------|
| PowerShot S30** | ✓ | | |
| PowerShot S40** | ✓ | | |
| PowerShot S45** | ✓ | | |
| PowerShot S50* | ✓ | | |
| PowerShot S60* | ✓ | | |
| PowerShot S70* | ✓ | | |
| PowerShot S80* | ✓ | | |
| PowerShot S90 | ✓ | | |
| PowerShot S100 DIGITAL ELPH** | ✓ | | |
| PowerShot S110 DIGITAL ELPH** | ✓ | | |
| PowerShot S200 DIGITAL ELPH** | ✓ | | |
| PowerShot S230 DIGITAL ELPH** | ✓ | | |
| PowerShot S300 DIGITAL ELPH** | ✓ | | |
| PowerShot S330 DIGITAL ELPH** | ✓ | | |
| PowerShot S400 DIGITAL ELPH* | ✓ | | |
| PowerShot S410 DIGITAL ELPH* | ✓ | | |
| PowerShot S500 DIGITAL ELPH* | ✓ | | |
| PowerShot SD10 DIGITAL ELPH* | ✓ | | |
| PowerShot SD20 DIGITAL ELPH* | ✓ | | |
| PowerShot SD30 DIGITAL ELPH* | ✓ | | |
| PowerShot SD40 DIGITAL ELPH* | ✓ | | |
| PowerShot SD100 DIGITAL ELPH* | ✓ | | |
| PowerShot SD110 DIGITAL ELPH* | ✓ | | |
| PowerShot SD200 DIGITAL ELPH* | ✓ | | |
| PowerShot SD300 DIGITAL ELPH* | ✓ | | |
| PowerShot SD400 DIGITAL ELPH* | ✓ | | |
| PowerShot SD430 DIGITAL ELPH WIRELESS*^ | ✓ | | |
| PowerShot SD450 DIGITAL ELPH* | ✓ | | |
| PowerShot SD500 DIGITAL ELPH* | ✓ | | |
| PowerShot SD550 DIGITAL ELPH* | ✓ | | |
| PowerShot SD600 DIGITAL ELPH* | ✓ | | |

* CameraWindow does not start.

** Images can be viewed using memory card only.

^ Wireless connection not supported.

Models with no asterisks launch CameraWindow automatically.

Does not include PowerShot models released before 2001.



Windows® 7 Compatibility List

| PowerShot Digital Camera | Windows 7 OS | Windows Updates | Canon Download Library |
|-------------------------------------------------------------|--------------|-----------------|------------------------|
| PowerShot SD630 DIGITAL ELPH* | ✓ | | |
| PowerShot SD700 IS DIGITAL ELPH* | ✓ | | |
| PowerShot SD750 DIGITAL ELPH* | ✓ | | |
| PowerShot SD770 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD780 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD790 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD800 IS DIGITAL ELPH* | ✓ | | |
| PowerShot SD850 IS DIGITAL ELPH* | ✓ | | |
| PowerShot SD870 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD880 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD890 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD900 DIGITAL ELPH* | ✓ | | |
| PowerShot SD940 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD950 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD960 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD970 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD980 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD990 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD1000 DIGITAL ELPH* | ✓ | | |
| PowerShot SD1100 IS DIGITAL ELPH | ✓ | | |
| PowerShot SD1200 IS DIGITAL ELPH | ✓ | | |
| PowerShot SX1 IS | ✓ | | |
| PowerShot SX10 IS | ✓ | | |
| PowerShot SX20 IS | ✓ | | |
| PowerShot SX100 IS | ✓ | | |
| PowerShot SX110 IS | ✓ | | |
| PowerShot SX120 IS | ✓ | | |
| PowerShot SX200 IS | ✓ | | |
| PowerShot TX1* | ✓ | | |
| * CameraWindow does not start. | | | |
| ** Images can be viewed using memory card only. | | | |
| ^ Wireless connection not supported. | | | |
| Models with no asterisks launch CameraWindow automatically. | | | |
| Does not include PowerShot models released before 2001. | | | |